

# svan

## OWNER'S MANUAL HEAT PUMP DRYER SVSB84

Thank you for choosing our dryers.  
Please read this manual carefully. It provides instruction, and maintenance. Retain it for future reference.

The following symbols are used in this manual:




Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information

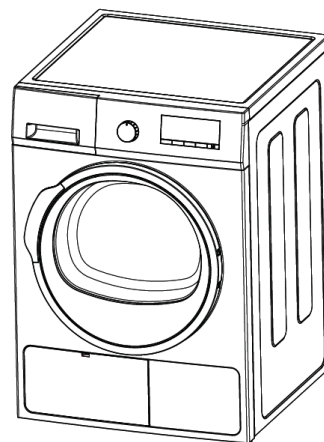

**SVAN TRADING S.L.**

C/ Ciudad de Cartagena, 20. Paterna (46988). SPAIN.

[info@svanelectro.com](mailto:info@svanelectro.com)

960600034



## WARNING

Read and understand thoroughly this safety instructions before use. The items indicated here are very important safety precautions, which must be followed. Any failure and losses caused by ignoring the above mentioned items and cautions mentioned in the operation and installation instruction are not covered by our warranty and any liability.



The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.


The rear surface of appliance shall be placed against a wall.

The appliance must not be supplied through an external switching device, such as a timer or connected to a circuit that is regularly switched on and off by a utility.



## Possible Electric Shock


- Disassembly, repair or modification can't be carried out by people other than professional maintenance staff.
- The household electrical supply system (the current, the voltage, the cable) should be safety devices, such as a fuse with the specifications and safety details provided should meet requirements of the dryer operation under normal load.
- The power plug must be connected to a three-core socket with an earth wire and is grounded properly and reliably.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't disconnect the power plug by pulling the supply cord. Hold the power plug with your hand.
- Don't use the supply cord when connection of the power plug and the supply cord is loose.
- Don't touch the power plug with wet hands. Wipe dust or water drops over the power plug off with dry cloth.
- Don't over-bend the supply cord or put it under heavy weight.
- Don't use the supply cord/socket/power plug if it is damaged or broken.

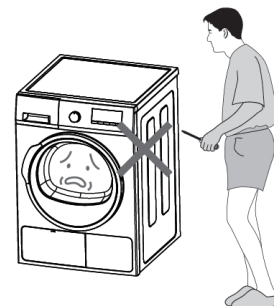




## Possible Explosions

- Don't put combustible liquid such as gasoline, petrol and alcohol into the appliance or nearby. Don't put clothes with that liquid into the appliance.
- Don't connect / disconnect the power plug when leakage of gas or other combustible gas occurs.

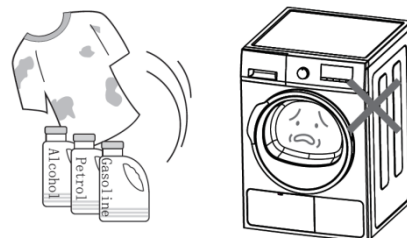

## Fire Accidents/Short Circuit or Electric Leakage May Occur

- Do not put clothes stained with the above liquids into the appliance
- Do not rest any burning candles or cigarettes on the appliance.
- Do not install the appliance in areas prone to damp or rainfall as water on the electrical components can damage the appliance and / or cause accidents.
- Do not install the dryer in places under direct sunshine as this can damage the plastic and rubber components.
- Do not use water jets on the appliance when cleaning it.
- In order to avoid danger of fires caused by excessive drying, do not use the appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- When using stain remover on your laundry, ensure you run an extra rinse cycle prior to loading the tumble dryer.
- Ensure all pockets are empty prior to loading laundry into the tumble dryer
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Ensure the openings in the base are not obstructed by carpets.
- The hot air discharge from the dryer cannot be shared with other exhaust passages from devices that burn gases or other fuels.

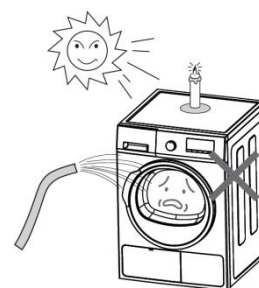

### Warning


**Never stop a tumble dry before the end of the cycle unless all items are quickly removed and spread out so that the heat is dissipated**



## Personal Injury May Occur

---

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- To avoid danger to children, ensure all packaging is disposed of safely.
- Ensure children under 3 years of age are supervised.
- Wait until the drum has stopped completely prior to removing laundry from the dryer.
- Children and pets should be kept away when the dryer is working to ensure they do not become trapped. Always check the drum carefully before closing the door.

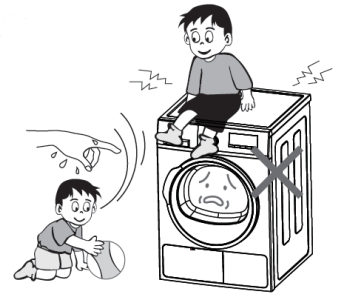

## Other Instructions

---

- This appliance is designed for wash fabrics which are designed to be machine dried. Follow the instruction on garment label.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Do not climb onto the dryer or rest heavy objects / heating devices or items with water or liquid leakage on the dryer, lest deformation of the face panel and the plastic component occurs.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, or vent hose.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, clean and maintenance.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.

- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- The tumble dryer is not be used if industrial chemicals have been used for cleaning.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final pat of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- That exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- That the appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- The lint trap has to be cleaned frequently.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot detergent before being dried in the tumble dryer. Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Remove all objects from pockets such as lighters and matches.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil.
- Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.  
Piling, tacking or storing oil affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent this will reduce, but not eliminate, the hazard
- Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
- Hermetically sealed system.
- Do not vent gases into the atmosphere. Refrigerant (Type): R-134a (GWP=1430)  
Refrigerant (Charging): 0.48kg
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## Disposal




Dispose of the packaging material of the dishwasher correctly. All packaging materials can be recycled. The plastic parts are marked with the international standard abbreviations: (for example, PS for polystyrene, filler material) This device is identified according to the European Directive 2012/19 / EU on waste electrical and electronic equipment -WEEE. The guide specifies the framework for a valid return and reuse of old appliances throughout the EU.


**Warning!** The packaging material could be dangerous for children! To dispose of the package and the device, go to a recycling center. Cut off the power cord and leave the door lock device unusable. The cardboard packaging is made with recycled paper and must be disposed of in the appropriate container for recycling. By ensuring that this product is disposed of correctly, it will help to avoid possible negative consequences for the environment and human health, which could otherwise be caused by the improper use of the waste of this product. For more detailed information about recycling this product, contact your local city office and your household waste disposal service.

## Product description

1. Control Panel
2. Water Tank
3. Fluff filter
4. Door
5. Condenser cover
6. Adjustment leg

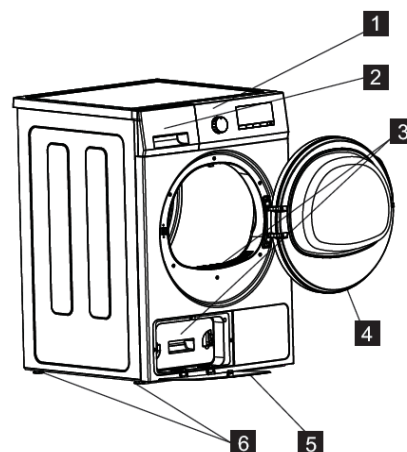

## Control Panel

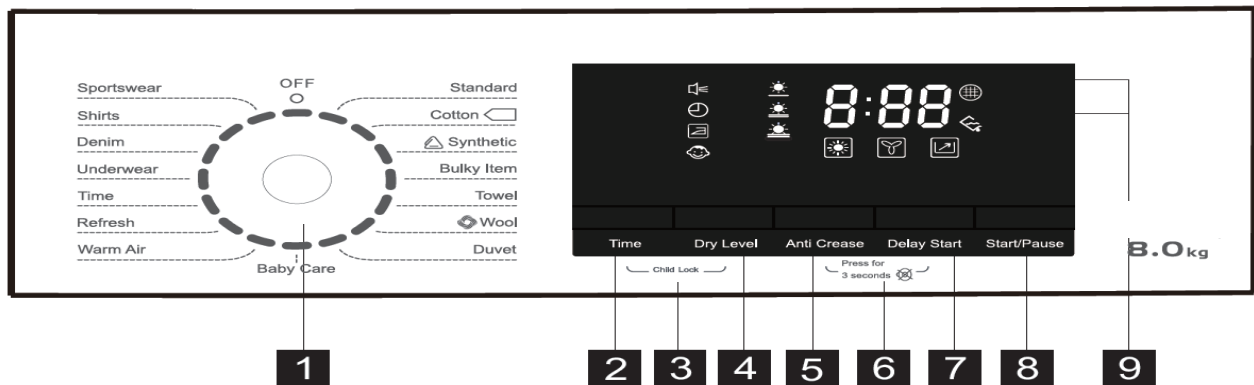

1. Program Selection Dial
2. Time
3. Child Lock
4. Dry Level
5. Anti Crease

6. Buzzer
7. Delay Start
8. Start/Pause
9. Indicate Lights(blue):  
Drainage Container  
Fluff Filter



### First Use


- Ensure that electrical connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand-new tumble dryer.



### Daily Use

## Connect the Appliance


- Open the door (see picture).
- Place the laundry in the drum, one item at a time, shaking them out as much as possible.
- Close the door. Please check the laundry does not get caught between the door and filter.

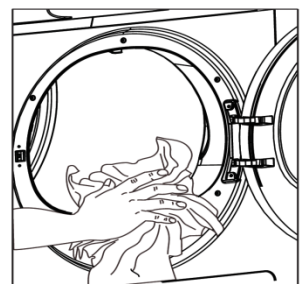




## Select The Required Program

- Turn the program selector dial to the required program. The Start/Pause light starts to flash.
- The program will be switched off if you have not pressed any button for 10 minutes

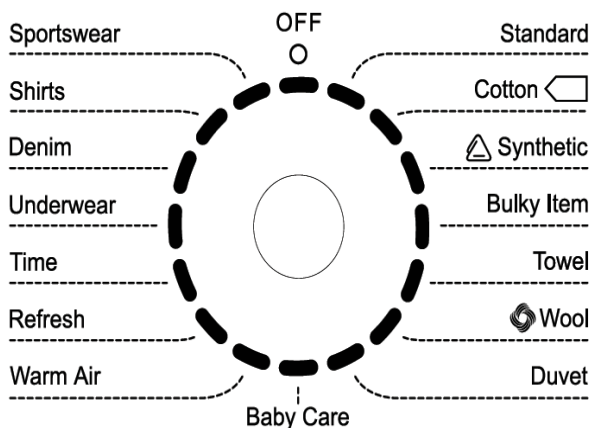

### Attention:

 -  is for the “standard cotton program”. The program is suitable to dry normal wet cotton Laundry and it is the most efficient Program in terms of energy Consumption for drying wet cotton laundry.
- Some thick clothes (jeans, big towel). Because of the material characteristics, some place hard to dry. If you find that they are not completely dry at the end of the program. It is recommended to use the “Time” program to dry again.

### Modifying the program

To change a program which is running, first cancel it by turning the program selector dial to “off”. Select the new program and press the “Start/Pause” button.

## Automatic Controlled Drying

- You can choose different program based on your different clothes materials. The device has the function with sensor the moisture in order to automatically adjust the drying time for optimal drying.
- This automatic control system is fit for most program except Warm Air, Refresh and Time.

## Time Controlled Drying

- You can choose the time of drying according to the actual situation, the knob is turned to the Time, and you can also increase it to the desired time by pressing the Time button.
- To cancel a program which is running, turn the program selector dial to “off”. At the end of drying, turn the selector dial to “off” to switch the machine off before removing the laundry.






## Programme Option Buttons

Depending on the program, different functions can be combined. These must be selected after choosing the desired program and before depressing the Start/Pause button. When these buttons are pressed, the corresponding indicator lights come on. When they are pressed again, the indicator lights go out.

### Select Buzzer

- The buzzer can be selected during normal use. Press the “Buzzer” button to turn off the buzzer and corresponding light. Press once again to activate the buzzer and corresponding light. A sound will be emitted.
- The “Buzzer” key is pressing Anti Crease and Delay Start at the same time for 5second.

### Select Dry Level

 
- Before you start the machine, you can choose the dry level. The dry level is divided into three grades:  
(  Heavy  Strong  Normal )
- This option is only suitable to the five programs: Daily, Cotton, Synthetic, Bulky Item, Towel.

### Select Anti Crease

Anti-crease is a default setting at the end of each program. Longer Anti-crease can be selected while the program is in standby or running.

### Select Delay Start

This button allows you to delay the start of the program by up to 24 hours (each time the button is pressed the time is increased by 1 hour). This option must be selected after setting the required program and before pressing Start/Pause to commence drying. When Start /Pause is pressed, the corresponding indicator lights start to flash, and countdown begins.



The countdown begins after you have pressed the Start/Pause button. The corresponding light illuminates when you have pressed this button. All indicator lights go out except Delay Start pilot light.

## Select Start/Pause

Select the required program options and press the Start/Pause button to commence drying. The dryer will pause after pressing the button again or opening the door while the program is running. When the machine is suspended, Program Selection Dial and other keys are invalid except Start/Pause, Anti Crease and Buzzer keys. To re-start the program, press the Start/Pause button once again.

## Display

The display shows the following information:

- **Program duration**

After you have selected the program, its duration (in hours and minutes) appears on the display.

It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying. When the program starts, the remaining time is displayed.

- **Delay start**





If you have selected a delay time, the remaining time is displayed. Once you press the "Start/Pause" button, the appliance will start the delayed process. If you want to check the program selected, please press the "Start/Pause" button once more. And the time of selected program shows.









- **Incorrect option selection,**

If you select an option that is incorrect or not compatible with the program you have selected, the signal will sound as "Bi,Bi,Bi" to show Ers (error).

## Indicator Lights

These lights indicate the following functions:

- Drying light "  ", this light indicates that the appliance is in the drying phase.
- Cooling light "  ", this light indicates that the appliance is in the cooling phase. At the end of drying, there is 10 minutes cooling phase to cool the laundry.
- End of program light "  this light is on at the end of the cooling phase. This phase contains 30 minutes default anti crease except Cotton program, users can take out clothes anytime.
- Anti-Crease light "  ", this light is on when Anti Crease function is selected. In addition to Cotton program.

- Filter light "  ", It comes on every cycle to remind you that the filter must be cleaned at the end of the program.
- Child Lock light "  ", this light indicates the appliance is locked.
- Buzzer light "  ", this light is on when buzzer function is selected, Buzzer function is default.
- Delay Start light "  ", this light is on when delay start program is selected.
- Dry Level light "    ", these lights will be on when Dry Level function is selected. When you choose different drying intensities, the corresponding indicator light turns on.
- Tank full light "  ", It comes on after each program and also when the water tank is full, which remind you to empty the water container.  
In order to prevent condensate overflow, the machine will be suspended when the water tank is full. Note! Please empty the water container after each program to avoid the alarm when use in next time.

## At the End Of The Program

All drying programs end with 10 minutes cooling phase. If the laundry is not removed at the end of the cycle, the dryer runs anti crease phase (default: 30 minutes, select: 120 minutes). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-crease phase. The display shows "End" and the buzzer sounds for 15 seconds when the buzzer function is on. To finish, turn the program selector dial to off.

## "Child Lock" Function

When the machine is on, press "Time" and "Dry level" button for several seconds at the meantime, the system will lock all the buttons. Then all buttons are invalid except "off". If you want to make the appliance to return to the normal state ,then press "Time" and "Dry level" button for several seconds meantime again.

The function will be released in the following cases:

- Open the door during operation
- Take out filter drawer during operation
- Water tank full

You can set again the "Child Lock" function when you restart the machine.



## After Each Use

### Important!

If the drying program has to be stopped before it reaches the end, to avoid a build-up of heat inside the appliance, we recommend that: please turn the dial to "off" and then to "Refresh" and depress the "Start/Pause" button.

**Attention:** "- --" sign for the dormant state;

- Standby mode without any operation for 10 minutes, enter dormant state.
- Controller shows "End", without any operation for 10 minutes, enter dormant state.



## Drying Hints

## Before Loading Laundry

Never tumble dry the following: Particularly delicate items such as net curtains, woolen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



May be tumble dried



Normal drying (high temperature)



Delicate drying (low temperature)



Do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them.
- Close press studs, zips, hooks, tie belts and apron strings. Sort laundry according to type and degree of drying required.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Avoid drying dark clothes with light colored fluffy items such as towels as they could attract fluff.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items, e. g. shirts, should be briefly pre-spun before drying.
- Knitted textiles (knitted underwear) may shrink a little drying. Please do not over-dry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the program "Iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.

- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but at least 30 minutes, this will be necessary particularly for multilayered items (e.g. collars, pockets, etc.)

## During Loading Laundry

- Make sure that no metal objects are left in the laundry (e. g. hair clips, safety pins, pins)
- To avoid laundry becoming tangled: Close zips, button up duvet covers and tie loose ties or ribbons (e. g. of aprons).
- Turn items with double-layered fabrics inside out (e. g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.
- Remove all objects from pockets such as lighters and matches.

## Maximum Loads

Recommended loads are indicated in the program charts:


General rules:

- Cotton, linen: drum full but not too tightly packed;
- Synthetics: drum no more than half full;
- Delicate fabrics and woolens: drum no more than quarter full.

Try to load the maximum capacity of the machine as small loads are uneconomical.

**WARNING:** The appliance must not be supplied through an external as switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

## Drying Program

Program	Max Load	Description Of Program
Standard	8kg	Blend materials usual clothes and so on. It is possible to choose different drying strength
Cotton 	8kg	Cotton clothes and so on. It is possible to choose different drying strength
Synthetic	4kg	Chemical fiber products and so on. It is possible to choose different drying strength.
Bulky Item	8kg	To dry the larger clothes. (bed sheet, Quilt cover). It is possible to choose different drying strength and so on.
Towel	4kg	Towel It is possible to choose different drying strength
Wool	2kg	Knitted sweater and so on.
Duvet	3kg	Down jacket
Baby Care	3kg	Baby clothes
Warm Air	4kg	Used for drying delicate material loads, such as silk, etc. The machine dries depend on the display time, regardless of the drying level.
Refresh	4kg	The clothes are deodorizing and fresh, and the intensity of drying is weak. The machine dries depend on the display time, regardless of the drying level.
Time	8kg	Drying thick or multi-layered textiles, the machine dries depend on the display time, regardless of the drying level. e.g. terry toweling items. For drying individual items of laundry or for small volumes.
Underwear	2kg	Underwear
Denim	4kg	Denim
Shirts	2kg	Shirts
Sportswear	2kg	Sportswear

Kind Notice: for drying bathrobe and toweling towel, the max loads do not exceed 6kg.

## Laundry Weights

Bathrobe	1600g	Night Dress	265g
Napkin	130g	Ladies' Briefs	130g
Quilt Cover	930g	Men's Work Shirt	800g
Sheet	665g	Men's Shirt	265g
Pillowcase	266g	Men's Pajamas	130g
Tablecloth	330g	Blouse	665g
Toweling Towel	265g	Men's Underpants	130g
Tea Cloth	130g		



## Care and Cleaning

- You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.
- Don't clean the dryer by directly spraying water onto the dryer. Don't clean the dryer with benzene, thinner, alcohol or acetone. Otherwise, it may cause discoloration, deformation, damage, electric shock or fire.
- When cleaning the product, be sure to unplug the power cord.
- During the drying cycle, the control panel or the door may accumulate moisture.

### Control Panel


- Clean with a soft, damp clothes. Do not use abrasive substances.
- Don't spray cleaners directly on the panel.
- The control panel finish may be damaged by some laundry pre-treatment soil and stain remover products.
- Apply such products away from your dryer and wipe up any spills or overspray immediately.

### Stainless Steel Tumbler

- To clean the stainless-steel tumbler, use a damp cloth with a mild, non-abrasive cleaner suitable for stainless steel surfaces.
- Remove the cleaner residue and dry with a clean cloth.

### Cleaning the Door

- Clean periodically the interior part of the door to remove any fluff.
- Accurate cleaning ensures correct drying.

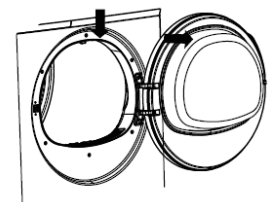

### Dryer Exterior

- The dryer has a high-gloss finish in enter. Clean with a soft, damp cloth. Don't use abrasive substances.
- Protect the surface from sharp objects as they may scratch or damage the finish.
- Don't place any heavy or sharp objects or a detergent box on the dryer. Keep them on the purchased pedestal or in a separate storage box.






**Do Not Use the Appliance Without Filter.**

## **Cleaning the Filter**

- Remove the lint filter by putting it up and open the lint filter.
- Clean lint, fiber and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.
- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.
- The lint trap has to be cleaned frequently.

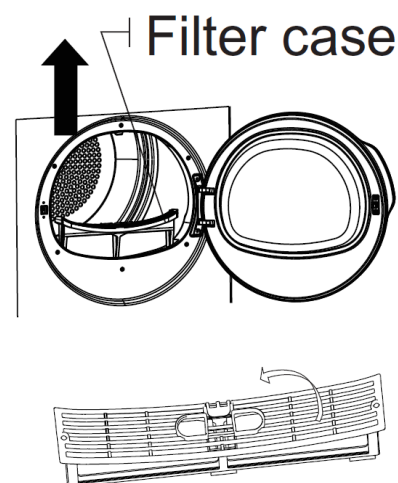


Always clean the lint filter and the inner surfaces of the loading door after each drying process.

## **Water Container Emptied**


Water container collects all the water from condenser. Water container need to be emptied after every drying cycle. If the water container is full, an active program will break off automatically, the light will come on and the buzzer sounds. In order to continue the program, the water container must first be emptied

1. Pull out water container.
2. Tip water into pool.
3. Put the water container in dryer.
4. Press the Start/Pause button.

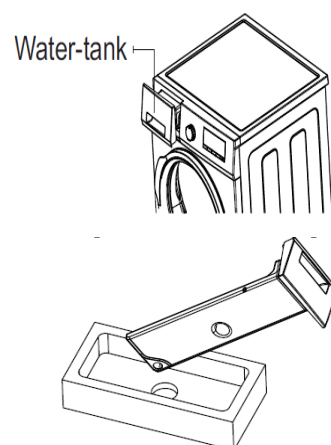

## Humidity Sensor


In the movement process, this device is used for induction humidity of clothing, it means that it must be carried on cleaning. Major cause of clean is must scour out the calcium oxide boiler which on the sensor surface up. Clean the sensor in the tumbler (See picture).

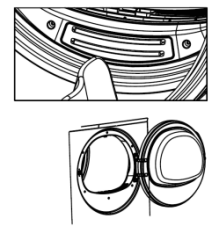

## Cleaning the Filter Drawer


Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the cover. Clean the filter drawer after each drying process. There is a two-level filter in

- the filter drawer. The first level is the filter drawer sponge and the second level are the filter cloth. Press the button to open the cover.
- Unlock the fixer.
- Pull out the filter drawer.
- Clean lint, fiber and cotton raveling on the filter cloth by hand or with a soft piece of cloth.
- When you notice a layer that may lead clogging on the filter cloth, please clean the layer by washing in warm water. Let the filter cloth dry thoroughly before installing back the filter drawer.
- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.

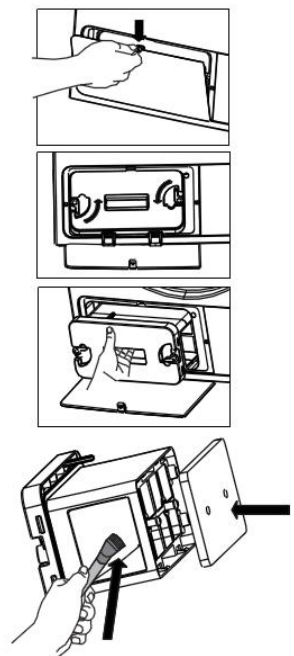

## Clean the Evaporator

- Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner or a soft brush. You can also clean by hand provided that you wear protective gloves.
- It is recommended to clean it at least twice every month.

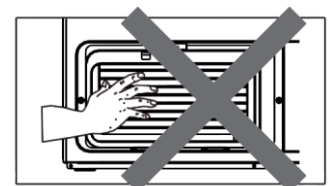

Warning

Never attempt to clean with bare hands. Evaporator fins can harm your hand

## Something Not Working

- Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Center, please carry out the checks listed below.
- During machine operation, appliance pause suddenly, It is indicate that the machine can't work normally. Once the problem has been eliminated, press the Start/Pause button to restart the program, if after checks, the problem persists, please contact your local service center.

Malfunction	Possible Cause	Solution
Dryer does not work	<ul style="list-style-type: none"> <li>● Mains plug is not plugged in.</li> <li>● Loading door is open.</li> <li>● Have you pressed the ►   button?</li> </ul>	<ul style="list-style-type: none"> <li>● Plug in at main socket.</li> <li>● Close loading door.</li> <li>● Press the ►   button again.</li> </ul>
Drying results unsatisfactory	<ul style="list-style-type: none"> <li>● Wrong program selected.</li> <li>● Filter clogged.</li> <li>● Incorrect volume of laundry.</li> <li>● The sediment on humidity sensor.</li> </ul>	<ul style="list-style-type: none"> <li>● Select a different program the next time you dry(see "Drying Program "section).</li> <li>● Clean lint filter.</li> <li>● Observe recommended loading volumes</li> </ul>
Drum light does not work(option)	<ul style="list-style-type: none"> <li>● Light bulb is defective.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace light bulb.</li> </ul>
Drying cycle ends shortly after program starts. "END" light illuminated.	<ul style="list-style-type: none"> <li>● Not enough washing loaded or washing load is too dry for selected program.</li> </ul>	<ul style="list-style-type: none"> <li>● Select higher drying level(e.g. Heavy instead of Strong)</li> </ul>
Drying cycle lasts an unusually long time.	<ul style="list-style-type: none"> <li>● Load volume is too big.</li> </ul>	<ul style="list-style-type: none"> <li>● Reduce load volume.</li> </ul>



If you are unable to identify or solve the problem, contact our service center. Before telephoning, make a note of the model, serial number and purchase date of your machine: The Service Center will require this information.

**IMPORTANT:** If you call out an engineer to a fault listed above, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

## Technical Data

Dryer Model	SVSB84
Dryer Capacity(kg)	8.0
(AC V/Hz)	220-240/50
Rated Power(w)	650
Weight(kg)	46
Power (left-on mode) (W)	0.36
Power (off mode) (W)	0.3
Energy Consumption Full Load(kWh)	1.35
Program Time Full Load(min)	220
Dimensions(W*D*H) (mm)	595X630X850
Ambient Temperature range (°C)	5 ~ 35

## Procedure

A separate earth is required by some local rules. In that case, you need to buy grounding wire.

- ⚠ It is dangerous to alter the specifications or attempt to modify this product in any way.

- ⚠ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

 

- ⚠ Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

- ⚠ **IMPORTANT:** The appliance must not build in.

- ⚠ **Unpacking:** All packing must remove before using the appliance.

- ⚠ Should the appliance be moved, it must be transported vertically.

**Check Accessory:** Open the accessory bag and check the accessories.

Accessory	Name	Quantity
	drainpipe	1
	manual	1

## Earth Note


This appliance must be earthed. In case of failure or damage, earth can provide a minimum resistance to reduce the possibility of electric shock. The power cord has grounding wire with device and power cord with plug. Plug must be inserted into a properly installed and grounded socket (in accordance with all local rules and standards).

## Water Discharge

It's not necessary to discharge the condensed water to the tank, it can also be drained out directly by change drainpipe as follow steps:

Pull out the water pipe by means of the arrow direction, then install the drainpipe.

Such as the piles can be used if it is difficult to do.

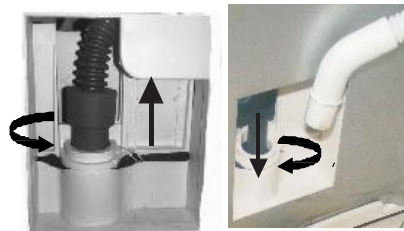

## Removing Transport Safety Packaging Foam




### Caution!

Before use the machine, the packaging foam must be removed from the drum.


1. Open the loading door.
2. Pull off adhesive strips on top of drum from inside machine.
3. Remove the two-packaging foam from the machine from inside machine.

Two Packing Foams

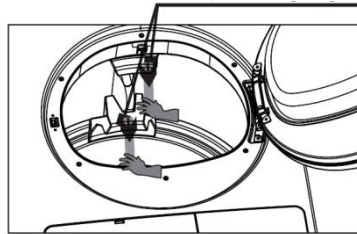

### Check across the corner:

- When press on the edge, the machine should not shake up and down. (please check two direction) when press on the top frame (across the corner), the dryer shakes, need to adjust the adjustable feet.
- Do not put stacks of blanket or a rope on the floor, which could generate some heat and affect the machine running.

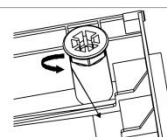

Adjustable screw



**IMPORTANT:** The hot air emitted by the tumble dryer can reach temperature of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

## Door Reversal

To make it easier to load or unload the laundry the door can be reversed. This operation must be carried out by qualified personnel. Please contact the nearest our service center.

## Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



### Warning

## THIS APPLIANCE MUST BE EARTHED



**The manufacturer declines any liability should this safety measure not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are colored in accordance with the following code:

Green and Yellow-Earth

Blue-Neutral

Brown-Live

The wire colored green and yellow must be connected to the terminal marked with the letter or by the earth symbol or colored green and yellow.



Warning

- A cut off plug inserted into a socket is a serious safety (shock) hazard.
- Ensure that the cut off plug is disposed of safely.
- Permanent connection

In case of permanent connection, it is necessary that you install a double pole switch.

The switch must not break the yellow and green earth cable at any




## Packing Materials


- The materials marked with the  
>PE<=polyethylene  
>PS<=polystyrene  
>PP<=polypropylene



symbol are recyclable.

- This means that they can be recycled by disposing of them properly in appropriate collection containers.
- Old machine  
Use authorized disposal site for your old appliance. Help to keep your country tidy!
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of

correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

- The Symbol  mean: caution, risk of fire Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce but not eliminate the hazard



## Ecological Hints

To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Select the drying program according to the type of laundry and the required degree of dryness.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well.

## Standard Guarantee Conditions

The manufacturer's warranty on this product, is only valid on the condition that:




- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorized by us.
- This guarantee is in addition to your statutory and other legal rights.



## This Guarantee Does Not Cover

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of our manufacture which are not marketed by us.

## Marking Explanation

V	Volt	~	Alternating Current
W	Watt	Hz	Hertz
	Tested safety		

## Electric Diagram

