



**UPRIGHT SHOWCASE  
USER'S MANUAL**

---

**MODELS:**

**SVRH1665SZ**

**SVRH1850P**

**SVRH1750P**

**SVRH12100P**

**SVRH12120P**


Please read this user's manual thoroughly before using.  
Keep this manual handy for further reference.

Dear Consumers:

Thank you very much for purchasing our products. In order ensure your safety and achieve the best out of this Cooler, pls read this instruction carefully.

## I 、 Details of Product

1. It uses quality, effective and hermetic compressor with broad rang of starting voltage, suitable ambient temperature: not higher than 38°C, reasonable matching of the showcase system guarantees its powerful refrigerant ability and energy saving.
2. Goods stored can be displayed clearly through the door made from luxurious hollow glass.
3. The thermal insulation layer of the showcase made from hard polyurethane foamed plastics makes it be light and good ability to keep the contents cold.

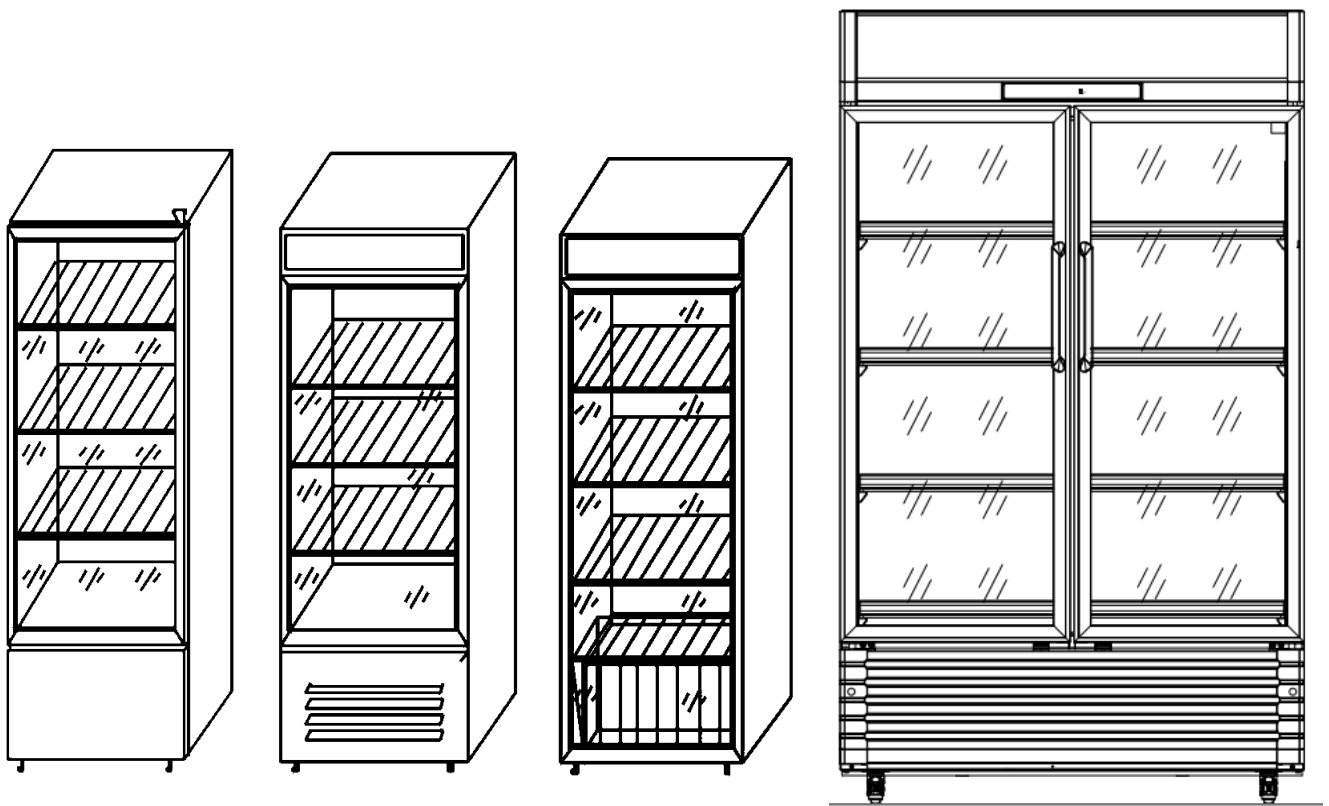

## II、 Caution for Safety

1. The Range of operating voltage: 187~242V. In order to avoid damaging the electrical performance of the compressor, please equip with a Voltage Stabiliser appliance of power not less than 500w, to protect the Cooler when the voltage is lower than 187V or higher than 242V.
2. Individual single-phase socket must be used. It should be reliably connected to a grounding wire. Caution: The grounding wire is not allowed to connect to a water pipe or a gas pipe.
3. Strong base, strong acid, organic solvent and corrosive goods or those are easy to pollute to food are prohibited storing in the showcase; otherwise, it can cause corrosiveness or accident.
4. Don't raise the showcase or the shell of the electric parts, or it will cause the decline in insulation and cause corrosion.
5. When the showcase will be out of use for a long time, disconnect the power first, then clean it. Please examine the circuit whether it is ok before reuse.

## III、 Caution for Using

1. Unpack all packages before using the showcase. Don't Bend it over more than 60° , while moving it.
  2. The showcase should be installed in the environment of good ventilation, Cool and dry and without corrosive gas. It should not be installed close to heat sources or directly under the sunlight. The space more than 10cm between the wall of the front and the back of the showcase should be allowed. When installing, the universal wheels should be padded well. So as to make the showcase be level and stable, or it will cause vibration and too much noise.
  3. When initial operation, the refrigerator should run emptily about one hour before storing food in it.
  4. The thermostat could adjust the temperature inside the showcase. When you turn the knob in clockwise. The bigger the figure, the lower the temperature. Generally, the position of '3-4' is suitable. '0' position stand for stopping operation. '6' position will be operating continually.
  5. To save energy, the door should not be frequently opened for left open for a long time.
  6. The surface and the inside of the showcase should be dry and clean. Long term moisture with cause the showcase rust slowly. (There will be some stains on the surface.)
  7. Periodical cleaning is suggested for your reference. Generally, 30-45 days once is best. When cleaning, it is best to wipe the inside and the surface of the showcase with the soft cloth with neutral soap or detergent.
- Caution: To ensure safety, the power plug must be pulled out before cleaning.



CE RoHS



SVAN TRADING S.L.  
C/ Ciudad de Cartagena, 20.  
Paterna (46988). SPAIN.  
info@svanelectro.com  
960600034